QUICK START GUIDE

Step 1 / Fill the solution tank

1



WARNING

Fill with clean water only or low foaming shampoo.

NO HIGH-FOAMING CHEMICALS

FILL THE SOLUTION TANK

Pour water into the open solution-tank fill opening as shown.
Follow the remaining steps to connect, prime and start cleaning.

CONNECT & POWER

Steps 2-3 / Connect the hoses, then plug in

2A



CONNECT THE SOLUTION HOSE

Pull back the female quick-disconnect collar and insert the hose's male fitting.

2B



LOCK IT IN PLACE

Release the collar. Gently tug the hose to confirm the fitting is secure.

2C



CONNECT THE VACUUM HOSE

Push the vacuum hose cuff firmly onto the open port on the clear recovery-tank lid.

3



PLUG IN THE UNIT

Use a grounded outlet on a dedicated 15-amp circuit. Do not share the circuit with other equipment.

HOSES FIRST. POWER NEXT.

Connect the solution hose before connecting the external vacuum hose.

PRIME & HEAT

Steps 4-5 / Prime the pump before turning on the heater


4A



TURN ON THE PUMP ONLY

Turn on switch I (water drop). Leave the heater and vacuum off.

4B

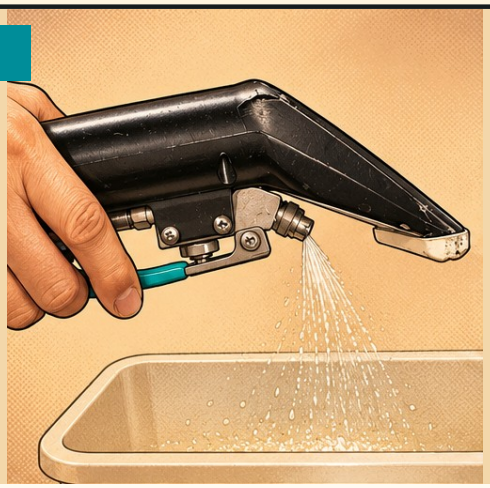


SQUEEZE AND HOLD

Hold the hand-tool lever until water sprays steadily from the jet.

ALLOW 1-2 MINUTES TO PRIME

The pump may take 1-2 minutes to purge air from the system and start spraying water.

5

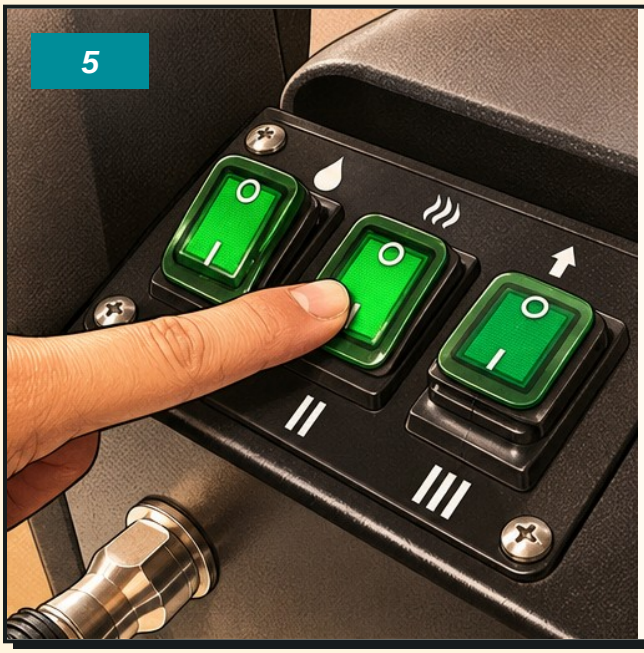

TURN ON THE HEATER

With the pump still on, turn on switch II (heat waves).

Allow 1-2 minutes for the heater to warm up.

START CLEANING

Step 6 / Turn on the vacuum and begin extraction



TURN ON THE VACUUM

Turn on switch III, leaving the pump and heater on.



SPRAY & EXTRACT

Squeeze the hand-tool lever to spray. Keep the tool against the fabric and move slowly so the vacuum can recover as much water as possible.